

First Class Passenger

PREVIEW™

User Guide



Britax

First class travel for children™

Warnings	2
Features	3
Assembly	4
Operating Instructions	
Unfold	5
Fold	6
Parking Brakes	7
Swivel Wheels	7
Backrest	8
Hood	8
Arm Bar	10
Carrier Attachment	10
Carrier Removal	11
Harness	12
Care and Maintenance	13
Warranty	14



This product and its components are subject to change without notice.

© 2004 Britax Child Safety, Inc. All rights reserved.


P251400 R1:11/04

Printed in China




WARNING


- Never leave child unattended!
- Avoid serious injury from falling or sliding out. Always use harness to secure child.
- Do not use stroller with an infant. Child must be approximately 6 months or older.
- Do not use stroller with a child who weighs more than 40 pounds (18 kg).
- Do not overload basket – Maximum weight in basket is 5 pounds (2.5 kg). Overloading the basket may cause the stroller to become unstable and tip over.
- Always make certain that the stroller is fully open and locked before use.
- Assembly of this stroller must be performed only by an adult.
- Do not hang or place items on the stroller handle or frame. They may cause the stroller to become unsafe.
- Children must always be restrained to prevent standing or falling out of stroller.
- Only use Britax approved child restraints or carriers with this stroller. It is not designed to be compatible with other child restraints or carriers.
- Do not allow children to climb on or play with the stroller.
- Never use stroller on stairs or escalators.
- To avoid entrapment or pinching, do not fold or unfold stroller when child is in or around stroller.
- Stroller is intended for walking speed only. Do not use while jogging, skating, etc.
- Never use the stroller with more than one child at a time.
- Always set the parking brake when stroller is not moving.
- Only use accessories and replacement parts approved by Britax Child Safety.
- Read and understand these instructions before using this product. To ensure proper use, store this user guide in a convenient place so it can be consulted often. Failure to follow all warnings and instructions could result in serious injury or death.

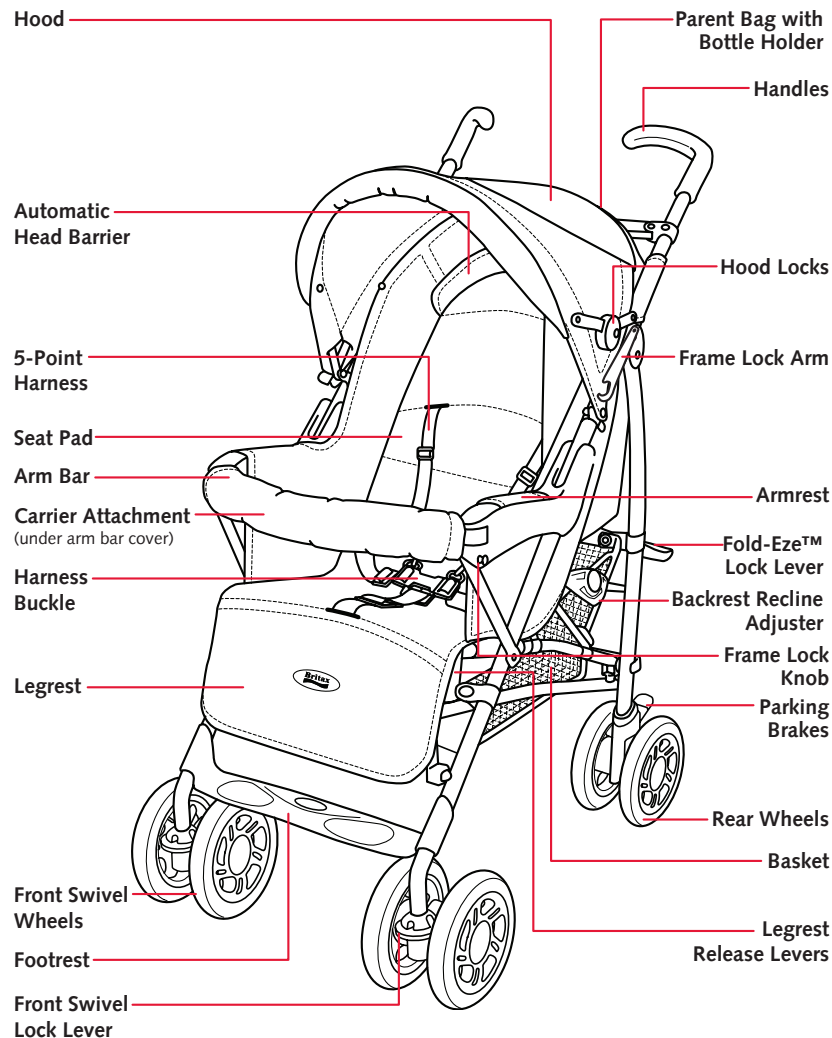


Initial Assembly

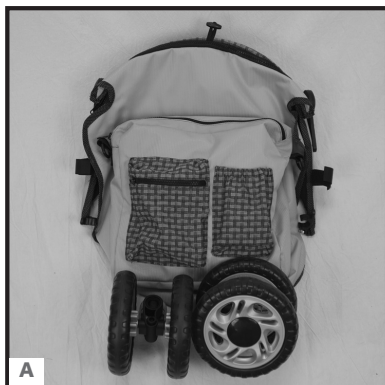


1 Locate dual front wheels (2x) and hood (fig. A).

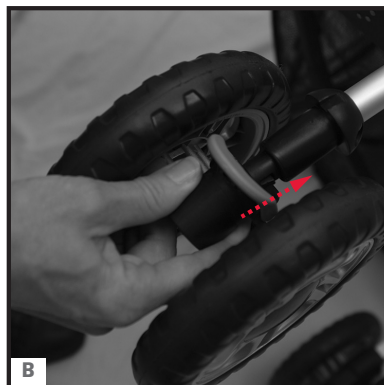


2 Attach front wheels to stroller frame (fig. B).
3 Unfold Stroller as instructed on page 5.

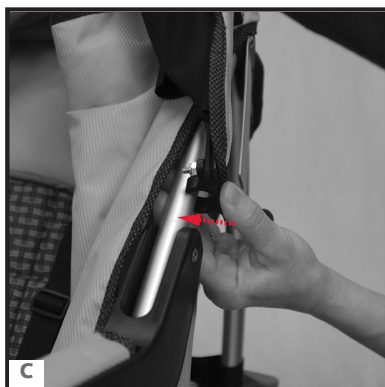


4 Attach hood: press two attachment clips onto each side of stroller frame (fig. C). Attach hook and loop fastener strips (3x) at rear of hood (fig. D).

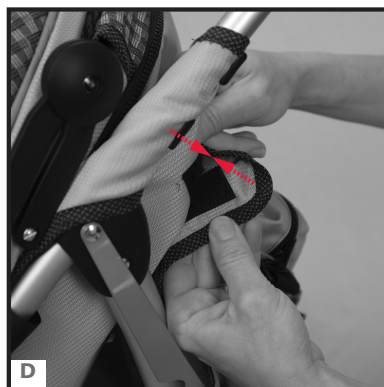


Unfold

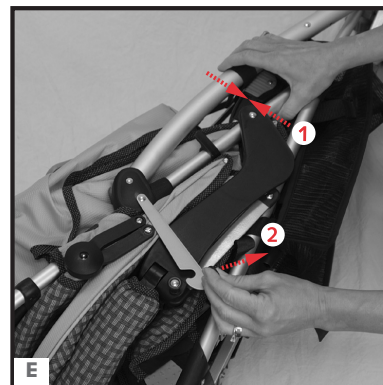


1 Squeeze frame while releasing frame lock arm from frame lock knob (fig. E).

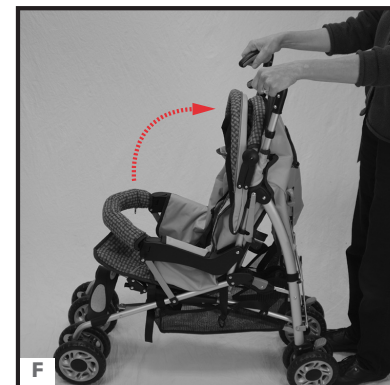

2 Lift handle upward to partially unfold stroller (fig. F).

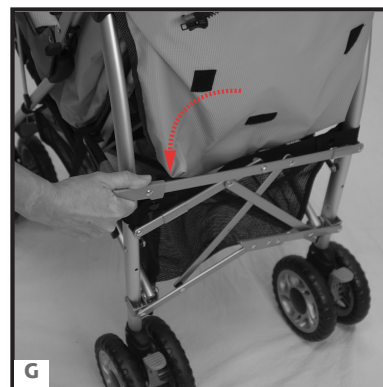


3 Press Fold-Eze™ lever down, until stroller frame is locked and stable (fig. G).

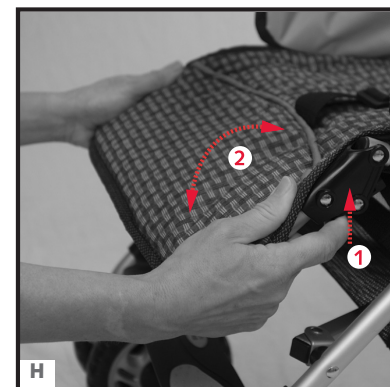


4 Adjust legrest into desired position by pressing release levers as shown (fig. H).

Fold

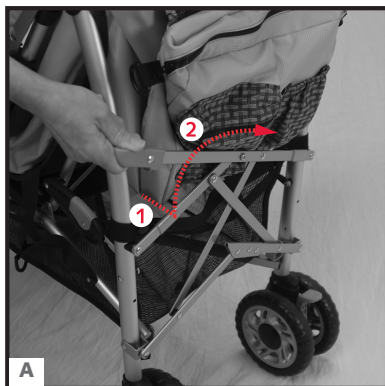


- 1 Release hood locks (pg. 9).
- 2 Pull Fold-Eze™ lever back, then up to release folding mechanism (fig. A).


IMPORTANT: To avoid damage, only pull lever back far enough for safety tab to clear the bar.

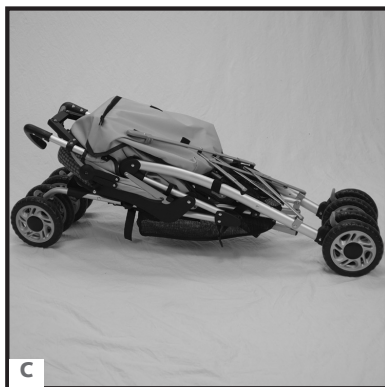

- 4 Fold downward until completely collapsed (fig. C).

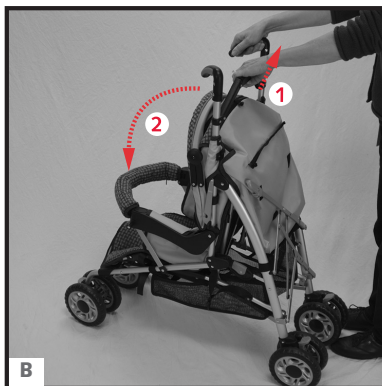


- 3 Fold stroller forward, while pulling support brace up to release (fig. B).

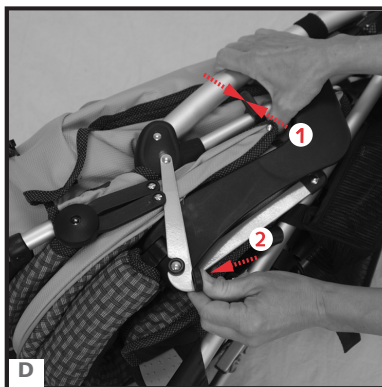


- 5 Squeeze frame together while attaching frame lock arm to frame lock knob located on side of armrest (fig. D).


Parking Brakes

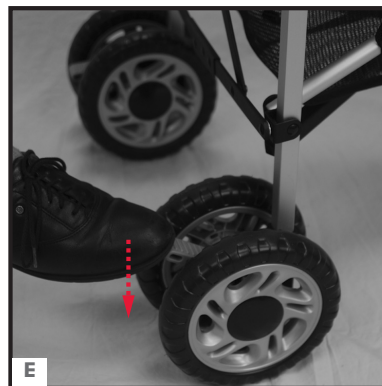


To Set Parking Brake 1 Locate brake lever between each set of rear wheels. 2 Press each lever down until fully engaged (fig. E). 3 Verify that brakes are fully engaged by attempting to move stroller forward and backward. **To Release Parking Brake** 1 Locate brake lever between each set of rear dual wheels. 2 Lift each lever until released (fig. F).

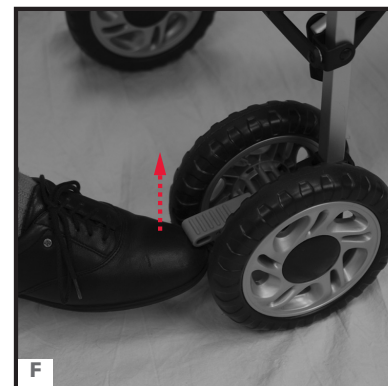

Swivel Wheels

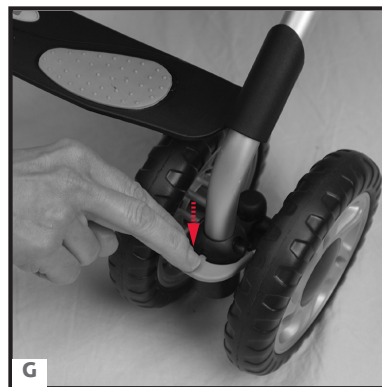


To allow front wheels to swivel, press swivel lever down (fig. G).

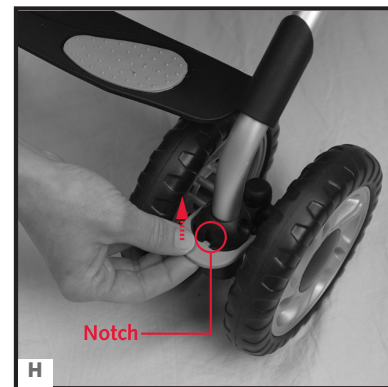

To prevent front wheels from swiveling, turn wheels forward, then lift swivel lever up until engaged with notch (fig. H).

Backrest

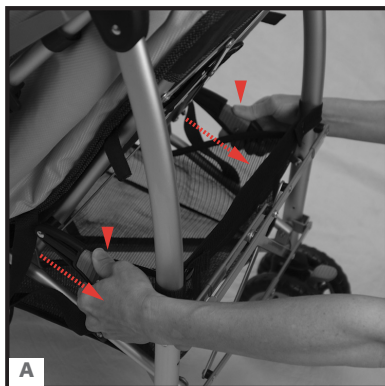


To lower backrest, press release button on each backrest recline adjuster, while lowering backrest to one of four available positions (fig. A).




To raise backrest, push backrest up until in one of four available positions (fig. B).

Hood

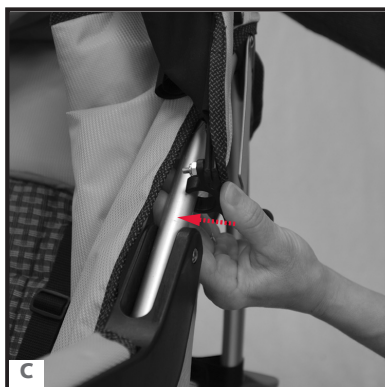


To Attach Hood, press two attachment clips onto each side of stroller frame (fig. C). Attach hook and loop fastener strips (3x) at rear of hood (fig. D).

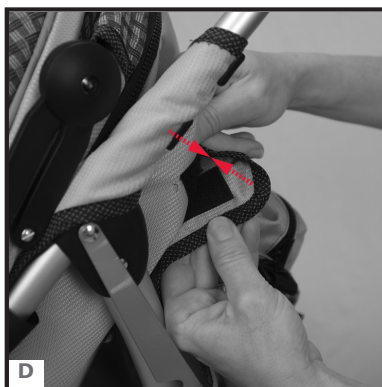


To Remove Hood, lift tab on each attachment clip (4x) to release from stroller frame. Release hook and loop fastener strips at rear of hood.


Hood (cont.)

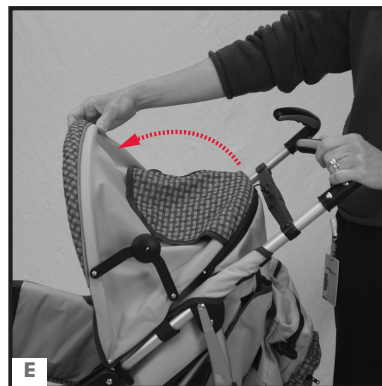

To Open Hood, pull hood forward (fig. E), then engage each hood lock by pressing down (fig. F).

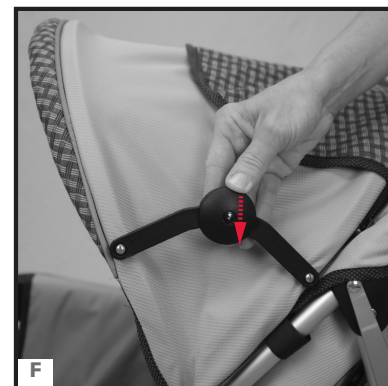

To Collapse Hood, release each hood lock by pressing up at center (fig. G), then hood backward to collapse (fig. H).

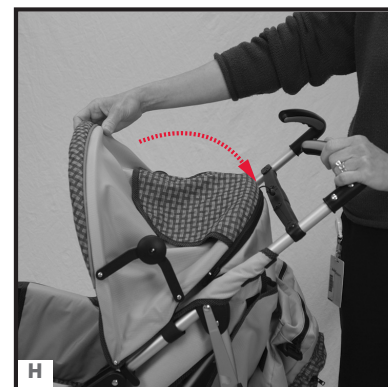


Arm Bar




To Remove Arm Bar, release and remove each attachment clip, located under armrests (fig. A).

IMPORTANT: If removing for use without arm bar, replace attachment clips.

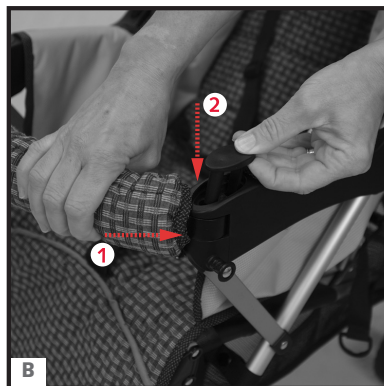


To Install Arm Bar, release and remove each attachment clip, located under stroller armrests. Slide arm bar into slots on stroller armrest, then replace attachment clips (fig. B).

Carrier Attachment (cont.)

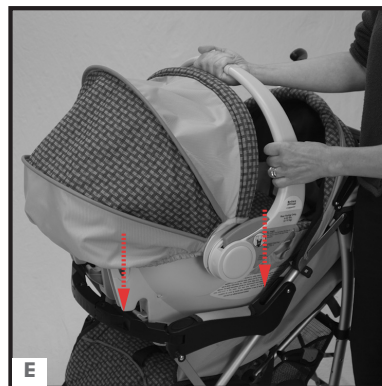


4 Press carrier onto arm bar until clicks are heard, which confirms attachment (fig. E).

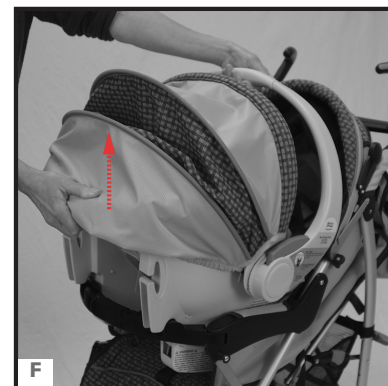


5 Check installation by lifting carrier from rear to verify that both attachment hooks are engaged with the arm bar (fig F).


Carrier Attachment

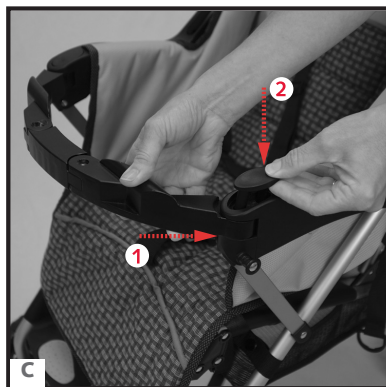


1 If arm bar is installed, remove zippered cover. If arm bar is not installed, install arm bar with smooth side up (fig. C).

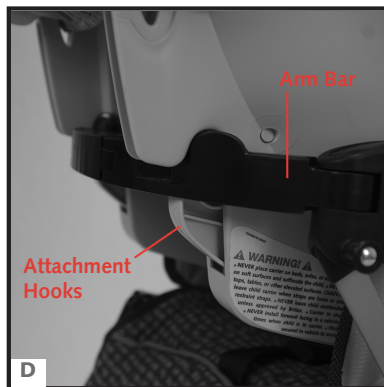

3 Lower backrest into full recline position (pg. 8).
4 Place carrier rear facing in stroller, with attachment hooks aligned with arm bar (fig. D).

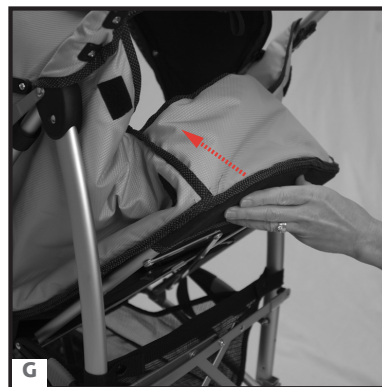


6 Raise stroller backrest to fully secure carrier. To raise backrest, push backrest up until in one of four available positions (fig. G).

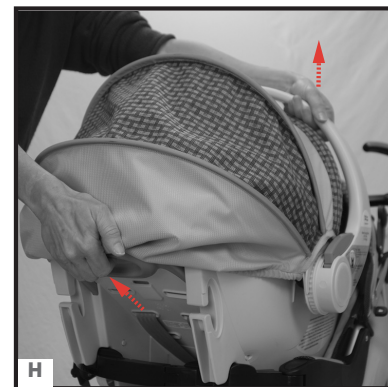


1 Fully recline stroller backrest (pg. 8).
2 Squeeze release lever on restraint, while lifting restraint from stroller (fig. H).
3 If desired, reinstall zippered cover on arm bar.


Harness

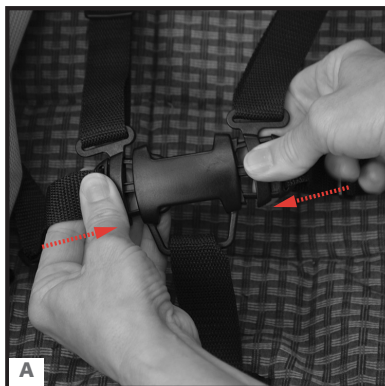


1 Position harness around child.
2 Insert each clip (2x) into adjacent side of buckle (fig. A).

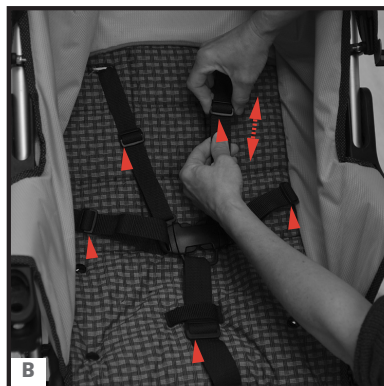

3 Loosen or tighten harness by sliding each (5x) adjuster to desired position (fig. B).

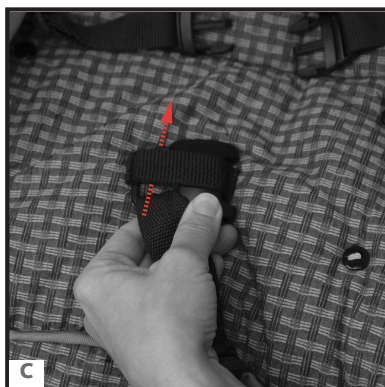

4 If necessary, use buckle loop for better fit. Unfasten buckle, then thread through loop (fig. C) for smaller child. Unthread when child requires more room in the harness.

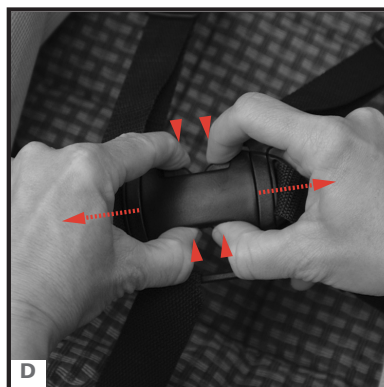

5 Unfasten buckle by squeezing clip on each side (fig. D).

Parking Brake

- Periodically check that the parking brake works properly and locks both wheels securely.
- Clean out any dirt or debris that may prevent the brake from working.

Frame

- Wipe the frame with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.

Fabric

- Do not machine wash or dry the cover.
- Hand wash with cold water and mild soap. Air dry to prevent the cover from shrinking.

Cleaning Plastic Parts:

- Wipe with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.

Wheels

- Periodically oil caster bolts and wheel axles with liquid silicone lubricant.

If Stroller Gets Wet:

- Dry stroller with a clean cloth or towel to prevent corrosion.
- Do not fold stroller when wet or damp. Always make sure that the stroller is dry before storing.

Plastic Parts

- Do not use abrasives, solvents, strong detergents, or household cleaners. These products can scratch, discolor, and weaken plastic or cause corrosion on metal surfaces.

Storage

- Store away from extreme heat to prevent damage to plastic parts.
- Cover stroller to prevent dust build-up and exposure to sunlight.
- Do not stack other items on top of stroller.

Warranty

This product is distributed by Britax Child Safety, Inc. Britax Child Safety, Inc. ("Britax") warrants this product to the original retail purchaser as follows:

Limited One-Year Warranty

This product is warranted against defective materials or workmanship for one year from the date of original purchase. Proof of purchase is required. Your exclusive remedy for this warranty is that Britax will, at its option, provide repair or replacement components to the original purchaser for this product or refund the original purchase price of the product. Britax reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions. Labor and shipping costs for returns are not included.

To make a claim under this Warranty, you must contact your Britax Retailer or Britax Customer Services Department at 1-888-4BRITAX or write to 13501 South Ridge Drive, Charlotte, NC 28273. Proof of purchase is required.

PLEASE COMPLETE AND MAIL THE REGISTRATION CARD WITHIN 30 DAYS OF PURCHASE.

Warranty Limitations

This warranty does not include damages which arise from negligence, misuse, salt corrosion, or use not in accordance with the user guide.

The use of non-Britax Child Safety, Inc. accessories is not approved by Britax. Only use Britax approved child restraints or carriers with this stroller. It is not designed to be compatible with other child restraints or carriers. The use of unapproved accessories could cause this product to become damaged or dangerous. Their use automatically voids the Britax warranty.

Limitations of Damages

The warranty and remedies as set forth above are exclusive and in lieu of all others, oral or written, express or implied. In no event will Britax or the retailer selling this product be liable for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitations of Warranties and Other Warranty Terms and State Law Rights

Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither Britax, nor the retailer selling this product, authorizes any person to create for it any other warranty, obligation, or liability in connection with this product.



First class travel for children™



Britax Child Safety, Inc.
13501 South Ridge Drive
Charlotte, NC 28273
USA

A Britax Childcare company

Tel: 704-409-1700
BritaxUSA.com

Britax
Childcare



First class travel for children